

Navtična šola E. Arnuš

The control panel for the VHF-DSC modem features a central green LCD screen displaying "Watching CH 70" and "Time 16:50:11". To the left of the screen is a volume knob and two "ODG" buttons. To the right is a numeric keypad with letters (ABC, DEF, GHI, JKL, MNO, PQR, STU, VWX, YZ-) and a "STOP ENT" button. Below the screen are buttons for "FUNC", "VHF CH", "RX MSG", "EDIT", "LAST", "NEXT", and directional arrows. At the bottom are "DIS TRESS", "ADDR BOOK", "CALL", "SEND", and more directional arrows.

VHF - DSC modem

Navtična šola E. Arnuš

The control panel for the VHF radiotelefon includes a speaker on the left and a red LED display showing "16" and "1W". A "SO" button is located above the display, and a "VOL OFF" knob is below it. To the right is a numeric keypad with various function labels: "SCAN", "SCAN ADD", "SCAN DELETE", "SELCAL T/R", "SCAN TIME", "DW", "DIM", "U.S.", "1W", "P", "SHIFT", and "16".

VHF radiotelefon